

GET0702-010A [UT]

0910DTSMDTJFIN EN. CT © 2010 Victor Company of Japan, Limited

ENGLISH / 中文

WARNINGS / 警告

- · You need the installation kits which corresponds to your car.
- If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.
- The unit can only be installed in a car with a 12 V DC power supply, negative ground.
- Disconnect the battery's negative terminal and make all electrical connections before installing the unit.
- Connect speakers with a maximum power of more than 50 W (impedance of 4 Ω to 8 Ω). Otherwise, change the <AMP GAIN> setting. (See page 15 of the INSTRUCTIONS.)
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not
 remove the caps on the ends of the unconnected wires or the terminals.
- If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one that has the same rating.
- · Install this unit in the console of your vehicle
- Mount the unit so that the mounting angle is 30° or less.
 Be sure to ground this unit to the car's chassis again after installation.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working
- Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot

- 您需要與您的汽車相配套的安裝元件。
- 如果您有問題,或需要有關配套元件的資料,請向JVC汽車音響分銷商或配套元件供應公司詢問。
- 本機僅可安裝在以直流 12 V 供電,負極接地的車內。 在安裝本機之前,拔開電池的負極端子,並把所有電路都連接好。
- 連接最大功率大於 50 W 的揚聲器(阻抗為 4 Ω 8 Ω)。 否則,請切換 <AMP GAIN> 設定。 (參閱使用 說明書的第15頁。
- 用絕緣帶或其他類似材料使未接上的電線絕緣。為防止電源短路,請勿除去未接上電線或端子兩端的保護蓋。
- 如果保險絲燒壞,首先請確認電線沒有接觸而導致短路,然後用相同負荷值的保險絲更換舊的保險絲
- 將本機安裝在車內的控制台上。
- 安裝本機時安裝角度最大為 30°。

電源和揚聲器接線注意事項

安裝完華後務必將本機的地線重新接至車身。 安裝完本機後,請檢查車上的剎車燈,信號燈,雨刷等是否能正常工作。

切勿把揚聲器導線接頭接至電池,否則本機將會嚴重損壞。在把揚聲器導線接頭接至揚聲器之前,檢查您汽車上的揚聲器線路。

• 請勿在使用本機的過程中和在使用本機後不久觸摸本機的金屬部分。金屬部分如散熱片和外殼變得很熱。


PRECAUTIONS on power supply and speaker connections

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in vour car.





INSTALLATION / 安裝

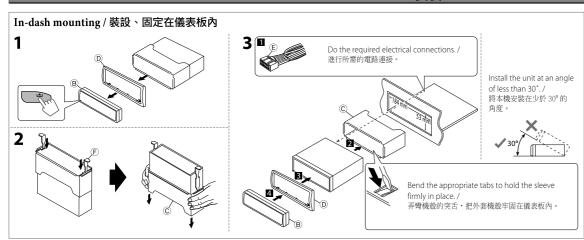


Part list / 零件清單

- A Hard case / 硬倉 (×1) (B) Control panel / 控制面板 (×1)
- Sleeve / 外套機殼 (×1)
- Trim plate / 裝飾框 (×1)
- Power cord / 電路連接用的配線束 $(\times 1)$
- ⑥ Handles / 板條型把手 (×2)



Removing the unit / 拆卸本機

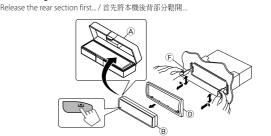

TROUBLESHOOTING / 故障排除


* Not supplied for this unit *不隋本機提供。


- The fuse blows. ⇒ Are the red and black leads connected correctly?
- Power cannot be turned on. ⇒ Is the vellow lead connected?
- No sound from the speakers. ⇒ Is the speaker output lead short-circuited?
- $\cdot \text{ ``MISWIRING CHK WIRING THEN RESET UNIT''} appears on the display and no operation can be done.$ ⇒ Is the speaker output lead short-circuited or touches the chassis of the car/head unit?; Have you reset vour unit?

Bracket / 托座 *

- Sound is distorted. \Rightarrow Is the speaker output lead grounded? ; Are the "-" terminals of L and R speakers grounded in common?
- Noise interfere with sounds. ⇒ Is the rear ground terminal connected to the car's chassis using shorter and thicker cords?
- This unit becomes hot. ⇒ Is the speaker output lead grounded? ; Are the "–" terminals of L and R speakers grounded in common?
- This unit does not work at all. ⇒ Have you reset your unit?

- 保險絡燒斷。 ➡ 檢查紅色邁線接頭和里色邁線接頭是否接觸正確?
- **電源不能接通。** ⇒ 檢查黃色導線接頭是否接上?
- 電源不能接煙。 → 微重真 当等級な規定百女上? 揺繋器沒有聲音。 → 檢查揚聲器輸出導線接頭是否短路? "MISWIRING CHK WIRING THEN RESET UNIT" 字樣在顯示窗上出現且無法進行任何操作。 → 檢查揚聲器輸出導線是否短路或碰觸汽車底盤 / 主機? 您是否已經重置您的機組? 聲音失真。 → 檢查揚聲器輸出端子是否接地? 檢查揚聲器的左(L)、右(R)端子的負極 "一"是否共同
- **噪音干擾音響。 ⇨** 後接地端子與車身是否使用較短和較厚的電線連接?
- 本機發熱。 ➡ 檢查揚聲器輸出端子是否接地? 檢查揚聲器的左 (L) 、右 (R) 端子的負極 "一"是否共同
- 本機完全不能操作。 ⇒ 您是否已經重置您的機組?

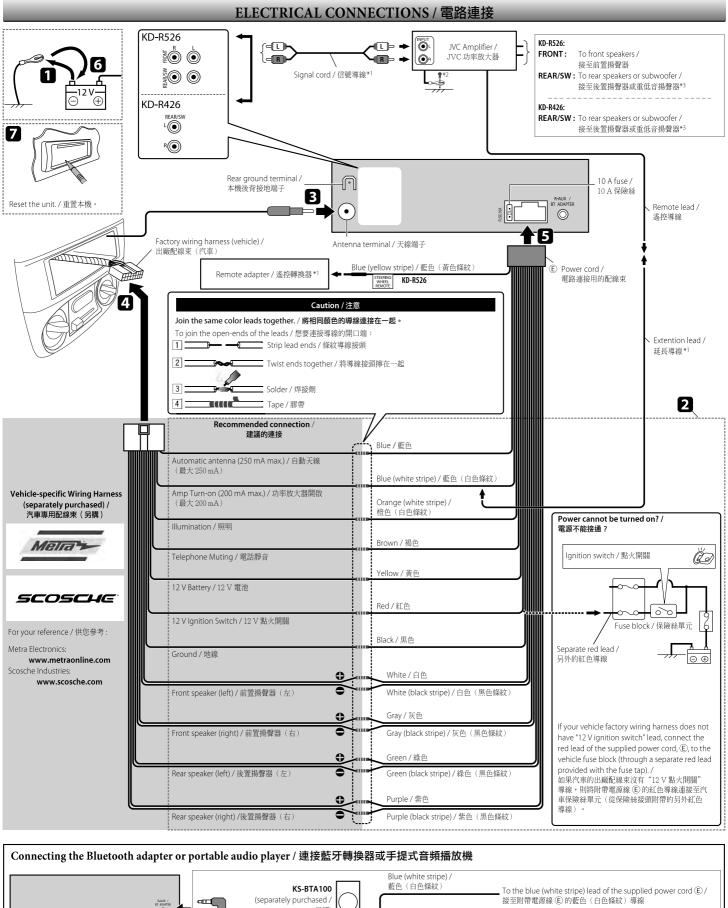

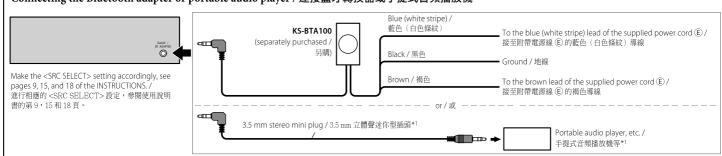

- *1 Not supplied for this unit.
- *2 Firmly attach the ground wire to the metallic body or to the chassis of the car—to the place uncoated with paint.
- *3 Make the <L/O MODE> setting accordingly, see page 14 of the INSTRUCTIONS.
- *1 不隨本機提供。
- *2 將地線與金屬車體或者汽車底盤緊密連接,連接處應該沒有被油漆覆蓋。
- *3 進行相應的 <L/O MODE> 設定,參閱使用說明書的第 14 頁。